



WATER TREATMENT KIT SETUP GUIDE

Any questions on setup or to re-order more belts/socks or dewatering bags, call: 1 (604) 343-2046

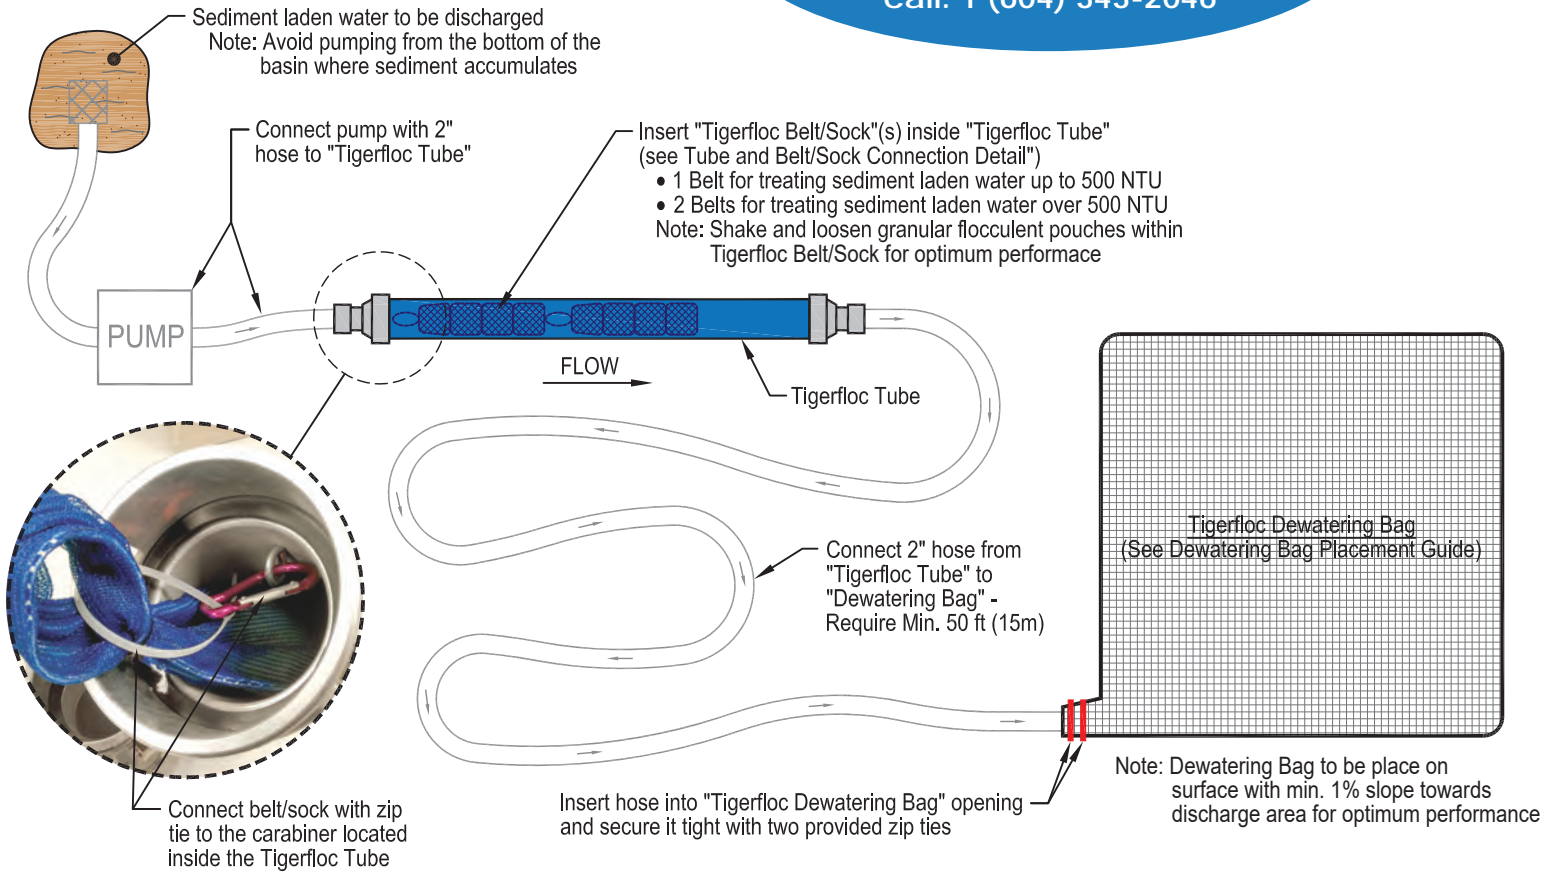


Dewatering Bag Placement Guide

A. Place over existing vegetated surface for infiltration

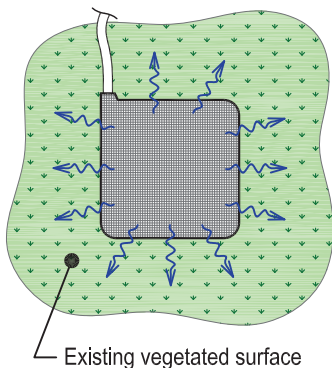

B. Place on poly with boarded frame over erodible surface

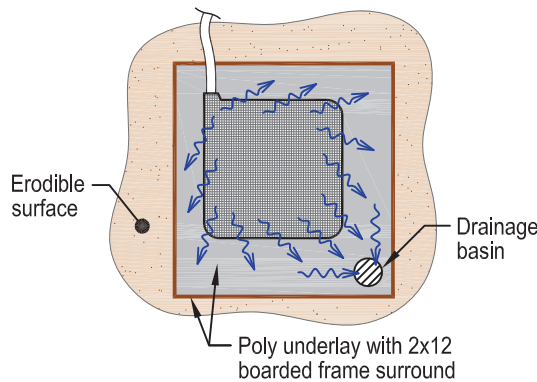

C. Place over non-erodible surface and discharge to nearby drainage basin

